

FAQ

How to Enable Z-Scores in Fetal Echo

[FAQ – Z-Scores in Fetal Echo]

- Question
I want to use **Z-scores** in Fetal Echo. How can I enable this feature?
- Answer
 - Path: Setup > Measurement > Application Options
 - 1. From the **Application** dropdown, select **Fetal Heart**.
 - 2. Set **Z-scores** to **On**.

