

FAQ

How to Display Frequency in Numeric MHz Instead of Pen/Gen/Res


[FAQ – Display Tx Frequency]

- Question
Can I display frequency values as numbers instead of **Pen/Gen/Res**?

- Answer

■ Path: Setup > Imaging > Display

1. Check the box for **Display Tx Frequency** to replace **Pen/Gen/Res** with numeric MHz (transmit frequency).
2. Once this is enabled, you can check **Rx Frequency Range** to display the receive frequency range. (This option is only available when Display Tx Frequency is checked.)

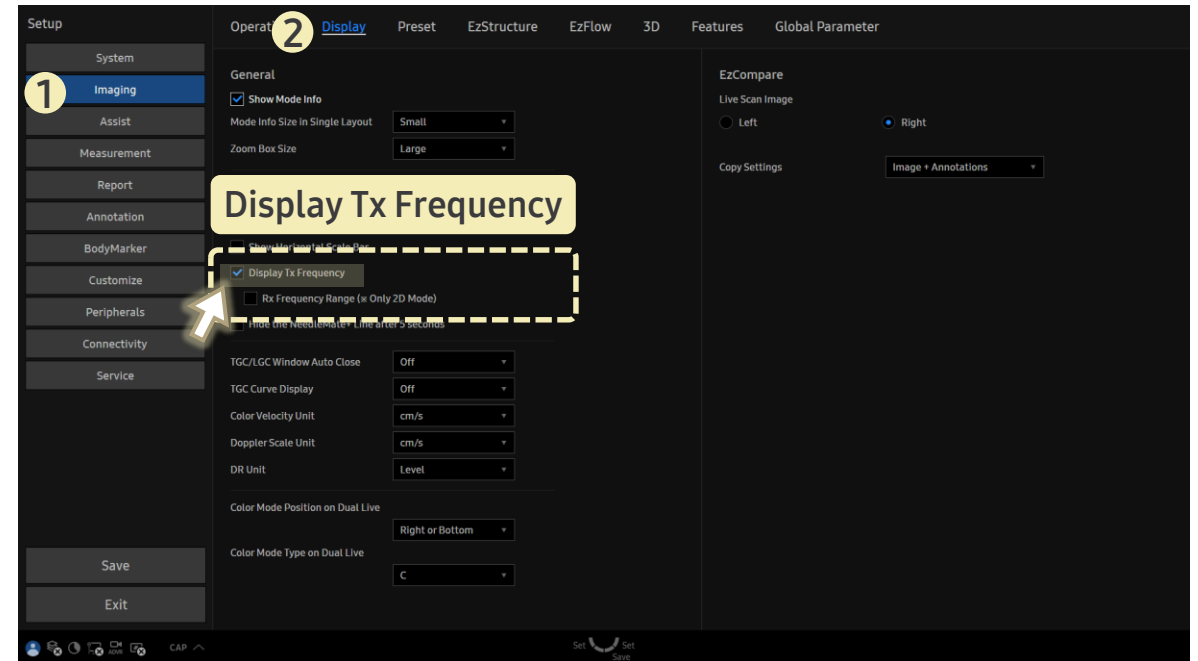

- If **Display Tx Frequency** is unchecked, the frequency is shown as Pen/Gen/Res.
 - **Res** (Resolution): High-frequency
 - **Gen** (General): Mid-frequency
 - **Pen** (Penetration): Low-frequency