

FAQ

How to Enable Auto-Display Function for On-Screen Keyboard

[FAQ – Screen Keyboard]


- Question
Where can I enable the auto-display function for the on-screen keyboard?

- Answer

■ Path: Setup > Peripherals > Peripherals

Select **On** in **Auto Display** to enable **On Screen Keyboard**.

- * Example: When selecting an input field in the patient entry window, a QWERTY keyboard or numeric keypad will appear on the touchscreen.

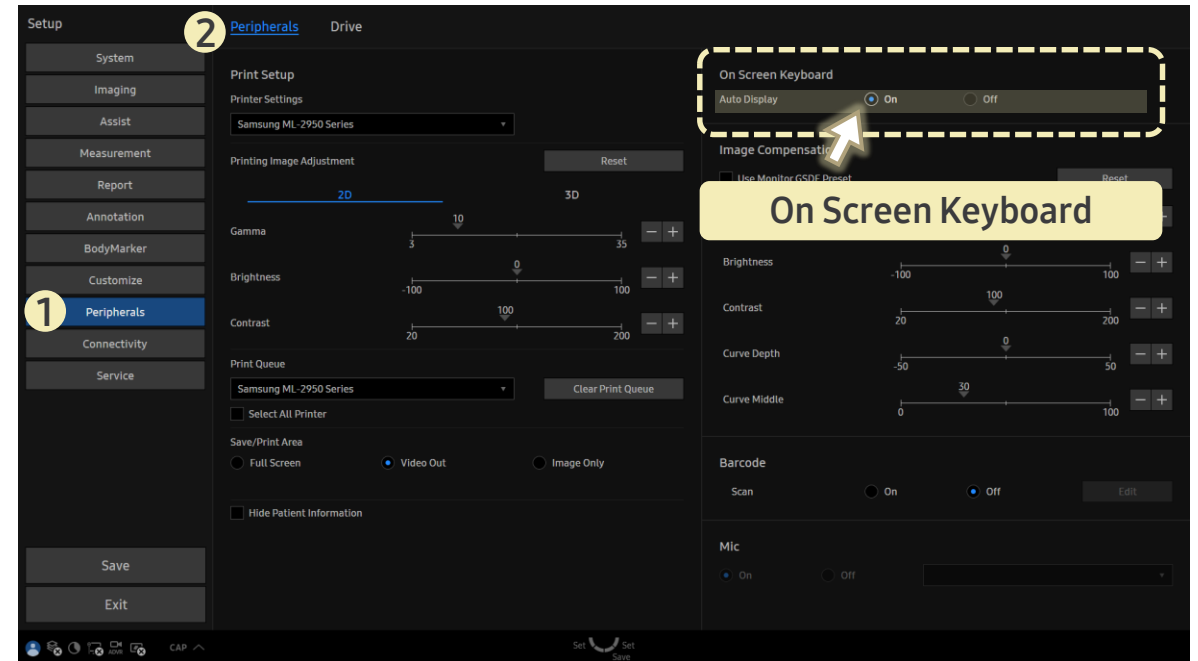

If **Off** is selected, the on-screen keyboard will not appear, and you must use the physical keyboard located at the bottom of the control panel.