

FAQ

How to Change the Unit for DR (Dynamic Range) in 2D Mode


[FAQ – Unit for Dynamic Range]

- Question
Can I change the unit displayed for **Dynamic Range (DR)** in 2D mode?

- Answer

■ Path: Setup > Imaging > Display

1. Go to **DR Unit**.
2. Select a unit from the dropdown: Level or dB.
 - ▶ **Level** displays values without units.
 - ▶ **dB** displays values with dB units.

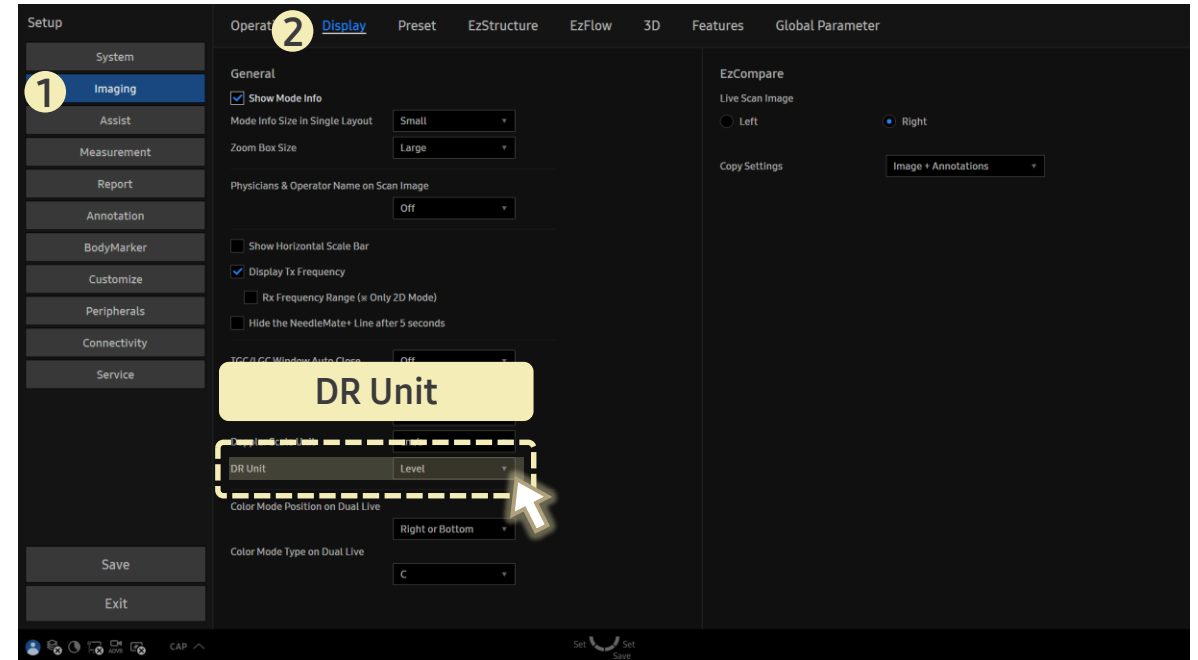

- The displayed DR values differ between **Level** and **dB** due to their distinct unit systems.