

## FAQ

# How to Adjust Color and PW Steer Separately

## [FAQ – Fine Tune Steer]


- Question  
I want to control **Color ROI** and **PW Line** separately when using **Fine Tune Steer**.  
What should I do?

- Answer

■ Path: Setup > Imaging > Operation

Set "**Fine Tune Steer in C-PW Mode**" to **Unlink C & PW values**.

- ▶ **Color ROI** and **PW Line** are adjusted separately at all times.

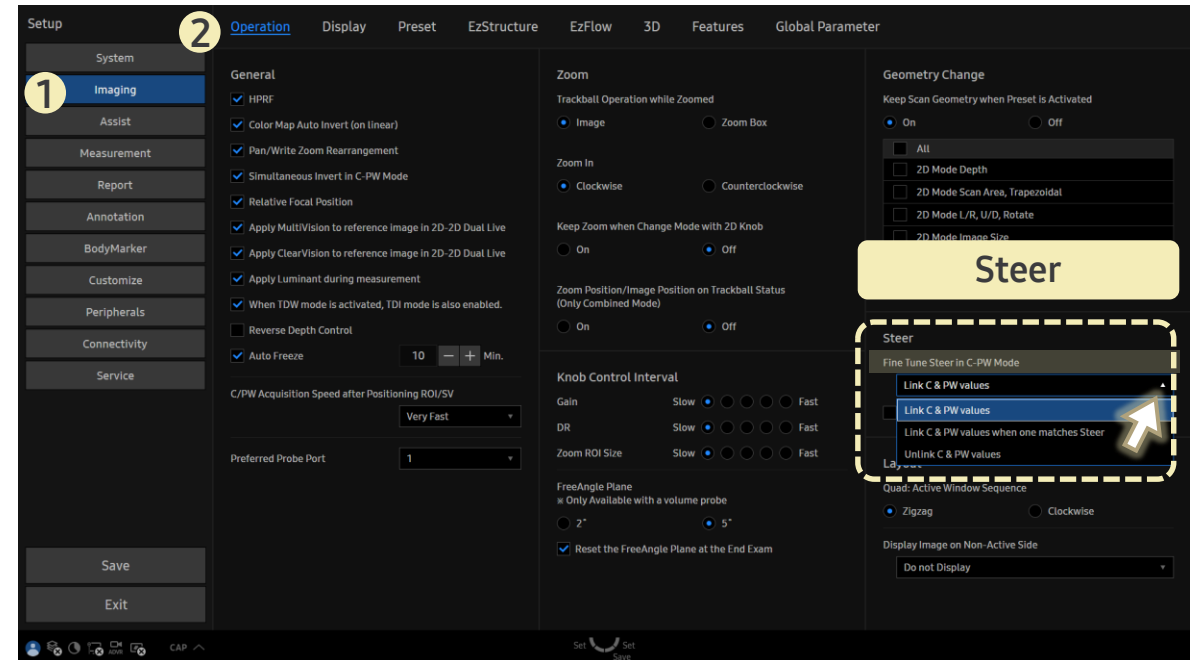

- **Steer** is available only with linear transducers.
- Requires both **Color** and **PW modes** to be active.
- On the touchscreen, use the lower knob key labeled **Fine Tune Steer** to adjust the steering angle in 1° increments.