

FAQ

How to Link Fine Tune Steer Between Color and PW Modes

[FAQ – Fine Tune Steer]


- Question
I want to adjust **Fine Tune Steer** for **Color** and **PW modes** together. How can I set this up?

- Answer

■ Path: Setup > Imaging > Operation

Select one of the following options:

- **Link C & PW values**
: Color ROI and PW Line are adjusted together.
- **Link C & PW values when one matches Steer**
: Linked only when using standard **Steer** angles (e.g., 0°,10°,20°); otherwise, adjusted independently.

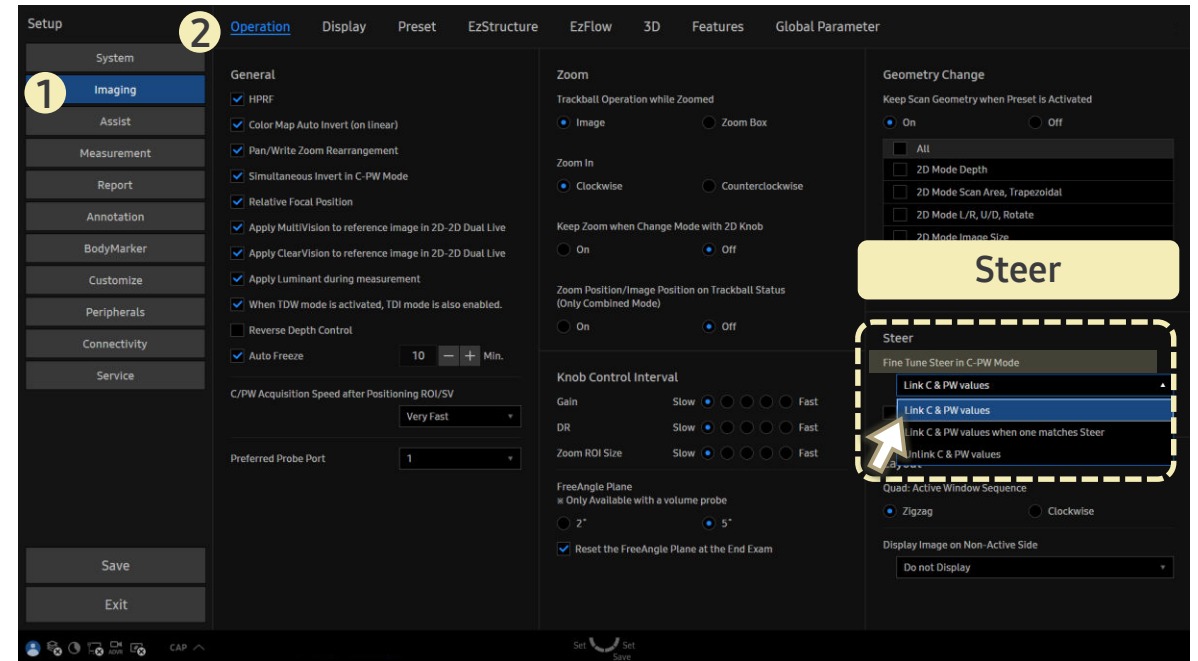

- **Steer** is available only with linear transducers.
- Requires both **Color** and **PW modes** to be active.
- On the touchscreen, use the lower knob key labeled **Fine Tune Steer** to adjust the steering angle in 1° increments.